

# PRO BFG™

## WIRELESS CONTROLLER

©2023 Victrix. Victrix, Pro BFG, and its respective logos are trademarks and/or registered trademarks of Victrix. "PS5" and "PS4" are registered trademarks or trademarks of Sony Interactive Entertainment Inc. All other trademarks are the property of their respective owners. Manufactured and distributed under license from Sony Interactive Entertainment.

This product is manufactured and imported by Victrix.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### WARRANTY INFORMATION

**Coverage and Term** • Victrix warrants that this product will be free from manufacturing defects for two years from the original date of purchase. Manufacturing defects are those defects in materials and/or workmanship, subject to final determination by Victrix's customer service department. This warranty applies only to original purchasers with a valid proof of purchase from an authorized Victrix retailer that clearly shows the date of purchase.

**Exclusive Remedy and Exclusions** • The exclusive remedy for valid claims will be the repair, replacement or refund of the product. This warranty does not cover defects caused by accidents, improper or abusive use of the product, unauthorized or improper modifications, repairs or handling.

**How to Get Service** • Purchasers with product issues should not return the product to the store, but instead contact Victrix's customer service department first. You can contact Victrix customer service by phone at 1-800-331-3844 (US and Canada only), Monday to Friday from 8 AM to 6 PM PST. International customers can contact us by phone at +442036957905. You can always reach us, 24/7, by visiting [victrixpro.com/support-victrix](http://victrixpro.com/support-victrix). Inquiries are typically answered within 24 business hours.

**Your Rights Under Applicable Law** • This warranty does not affect the legal rights of customers under applicable state, provincial, or national laws governing the sale of consumer goods.

**Additional Information for Australian Consumers:** Victrix products come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits given to you under our express warranty are in addition to other rights and remedies you have under the Australian Consumer Law and other laws.

This product is manufactured and imported by Victrix. Ce produit est fabriqué et importé par Victrix. 555 South 65th Avenue, Suite 200, Phoenix, AZ 85043 Phone: 800 331 3844 [US and Canada only]

Herikerbergweg 88, 1101 CM Amsterdam, Netherlands GPO Box 457 Brisbane, QLD 4001, Australia Tower 42, 25 Old Broad Street, London, EC2N 1HQ

Made in China. Designed in San Diego, CA USA by Victrix.



For PS5™ consoles & PS4™ consoles  
For Windows 10/11\*

\*PC compatibility not tested nor endorsed by Sony Interactive Entertainment.

### USING THE PRO BFG™ IN WIRELESS MODE

- To use the Pro BFG™ in Wireless Mode, toggle the purple switch on the back of the controller to the position with the Wireless icon (📶).
- Plug the included Wireless USB Dongle into your PS5™ console, PS4™ console, or PC. The LED on the dongle will begin flashing purple.
- Press and release the PS Button on the front of the Pro BFG Controller.
- Once connected, the X-Logo on the controller and the LED on the dongle will be illuminated solid purple.
- To turn off the controller, press and hold the PS Button for 5 seconds until the X-Logo LED turns off.

- This controller uses 2.4GHz radio frequency range. When the PS5™ console or other products use the same radio frequency range, it may give negative influence mutually.

- PDP™ validated operability between PS5™ consoles (CFI-1000 series) and this controller.


- It is recommended to insert the USB Dongle into the front USB port of PS5™ consoles (CFI-1000 series).



### USING THE PRO BFG™ IN WIRED MODE

- To use the Pro BFG™ in Wired Mode, toggle the purple switch on the back of the controller to the position with the Cable icon (🔌).
- Plug the included USB-C cable into the USB-C port on the top of the controller, and the other end into your PS5™ console, PS4™ console, or PC.
- Press the PS Button on the front of the controller to power on and connect to the console.

NOTE: If the switch on the back of the controller is set to the Cable icon (Wired Mode) but no USB Cable is connected when the PS Button is pressed, the Function LED will illuminate Red for 1 second before turning off. Make sure the cable is securely connected to the controller and the console.

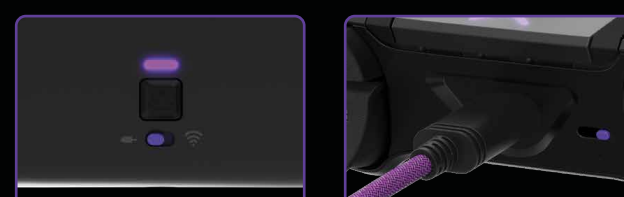

### PLATFORM SELECTION SWITCH

The Pro BFG can be used on PS5™ consoles, PS4™ consoles, and PC (Xinput).

- Use the 3-position purple slide switch on top of the controller (next to the USB-C port) to select between "PS5", "PS4", and "PC" modes to match the platform you are currently using.

NOTE: When using PC (Xinput) Mode, the Pro BFG does not support audio through the headset jack and does not support the touchpad feature.



### TOURNAMENT LOCK MODE

The Pro BFG has a Tournament Lock Mode to prevent accidental presses of system buttons that can disqualify you during tournaments. When Tournament Lock Mode is enabled, the PS, CREATE, OPTIONS, and Touchpad Button inputs will all be disabled.

- To enable Tournament Lock Mode, simultaneously press and quickly release the "Function" Button (on the front of the controller) and the "Profile" Button (on the back of the controller). The Function LED and Profile LED will illuminate dimly in Red and blink every few seconds to indicate it is in Tournament Lock Mode.
- To leave Tournament Lock Mode, simultaneously press and quickly release the "Function" Button and the "Profile" Button again to resume normal mode.



### AUDIO SETTINGS

- To adjust the game volume, hold down the "Function" button and press Up/Down on the D-pad.




- Cycle through different audio mode profiles by holding down the "Function" button and pressing L1/R1. The LED on the "Function" button will cycle between Purple (Pure Audio), Blue (Bass Boost), or Green (Treble Boost) to indicate the profile.

- To mute your microphone, press the "Function" button twice; the LED will illuminate Amber.

### PROGRAMMABLE BACK BUTTONS

- To program the back buttons, hold the "Profile" button on the back of the controller and press the desired back button you would like to map an input to. Once the Profile LED is flashing, press any button on the controller to map that button's function to the selected back button. The Profile LED will blink quickly 3 times indicating successful programming.

- To clear or disable a back button, hold the "Profile" button and double press the back button you wish to disable. The Profile LED will blink quickly 3 times indicating successful clearing.

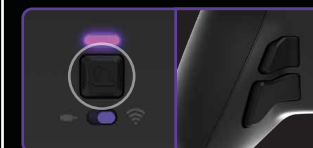

### CREATING CUSTOM PROFILES

Three custom profiles of back button mappings can be stored on the controller.

- Press and release the "Profile" button on the back of the controller to toggle between the 3 profiles. The "Profile" LED will illuminate in Purple, Blue, or Green to indicate which Profile is active.
- When mapping inputs to the back buttons, the "Profile" LED will blink in the color of the currently active Profile.



### TRIGGER STOPS

The Pro BFG Controller features our patented Clutch Trigger mechanism with 5 trigger stop settings.

- To adjust the trigger stop, press and hold the Clutch Sliders on the back of the controller, then depress the trigger to the desired stopping position. Release the Clutch Slider to set the trigger stop to your selected position.
- To set the triggers to Hair Trigger mode for fastest response and minimal travel distance, press and release the Clutch Sliders without touching the triggers. The triggers will now operate as a digital button.
- The Function LED will illuminate Yellow when the left clutch trigger is being adjusted, Turquoise for the right clutch trigger, and Green if both left and right are being adjusted simultaneously.



### REMOVING / SWAPPING MODULES

The Left module can be rotated 180° to choose between the standard analog stick layout of PlayStation® wireless controllers, or an offset sticks layout. The Right module can be removed and replaced with the 6-button Fightpad module for fighting games.

- To remove the module, locate the included purple Module Swap Tool in the carrying case and unscrew the 2 hex-screws on the module. The screws will be retained in the module and will not remove entirely or fall out from the module plate.

- Swap in the module of your choosing and screw in the 2 hex-screws to lock the module in place.

NOTE: It is recommended to recalibrate your Pro BFG after swapping the Left Module layout. Follow the steps in the Recalibration section.



### RECALIBRATING CONTROLLER

It is recommended to recalibrate your controller after swapping the Left Module layout, or if you are experiencing issues with the Analog Sticks or Triggers.

- To recalibrate your controller, Power Off your controller by holding the PS Button for 5 seconds until the X-Logo LED turns off.
- Toggle the purple Mode Switch on the back of the controller to WIRED MODE.
- Hold the D-PAD DOWN button while simultaneously plugging in the USB-C Cable to the controller. You should see the X-Logo LED and white Function LED blinking rapidly.
- Press the "X" (Cross) action button. The LEDs will now blink slowly.
- Rotate both Left and Right Analog Sticks in full 360° circular motions 3 times.
- Set both Triggers to full travel mode using the Clutch Buttons, then fully press and release both triggers 3 times.
- Press D-PAD DOWN to exit recalibration mode and confirm new calibration.

### CHANGING ANALOG STICK CAPS

The Pro BFG includes 4 analog stick caps (2 standard concave, 1 short convex, 1 tall Sniper Stick).

- To remove the analog stick cap, firmly pull up on the analog stick to remove it from the controller.
- To install the analog stick cap, align the mounting neck and press down until it clicks securely into place.



### CHANGING THE D-PAD

- To remove a D-pad, hold between two fingers and gently pull the Module out.
- To add a D-pad, line it up with the controller and gently push down until you hear a click.



### CHANGING THE GATES

- Remove the Module you wish to change the analog stick gate on (follow directions for Removing / Swapping Modules).
- To remove a gate, flip the module plate over (so the back is facing you) and press firmly on the back side of the gate with your thumb. The gate should pop out.
- When adding a gate, first make sure the front of the module plate is facing you. Then, line up the small alignment dot on the gate to the alignment dot on the module plate (octagonal gate only), and press down firmly until it clicks in around the whole gate.



### BATTERY CHARGING

The Pro BFG includes a Rechargeable Lithium Ion Battery.

- To recharge your controller, connect the included USB-C Cable to the USB-C port on the controller, and the other end into the USB port of your PS5™ console, PS4™ console, or PC.
- The X-Logo on the Touchpad will light up and begin fading in and out to indicate it is charging.
- Once fully charged, the X-Logo will remain solid on to indicate the battery is full.
- When your controller reaches a low battery level, the X-Logo will begin flashing quickly to warn you of the low battery.
- When the battery level is critically low and will die any minute, an audible warning tone will play every minute through a connected headset.

