


# OPENCOMM C102


## User Guide



Please refer to the following for more details

[userguide.shokz.net/opencomm](http://userguide.shokz.net/opencomm)

## How to Wear

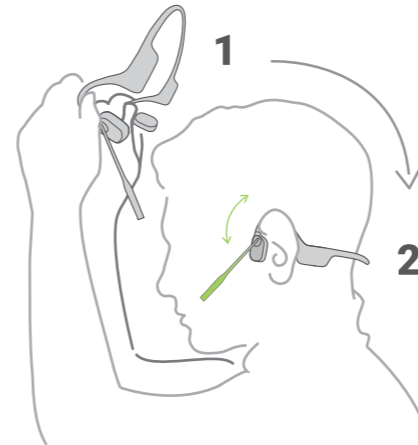


\*Position the noise-canceling microphone close to your mouth.



8000500096 (A1)

## ON/OFF

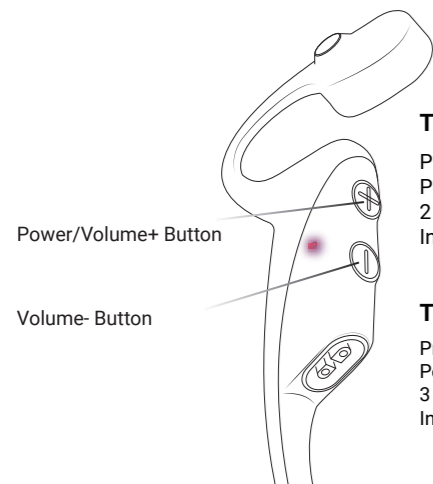


### Turn on the headset

Press and hold the Power/Volume+ Button for 2 seconds until the LED Indicator flashes blue.

### Turn off the headset


Press and hold the Power/Volume+ Button for 3 seconds until the LED Indicator flashes red.

## Pairing ①

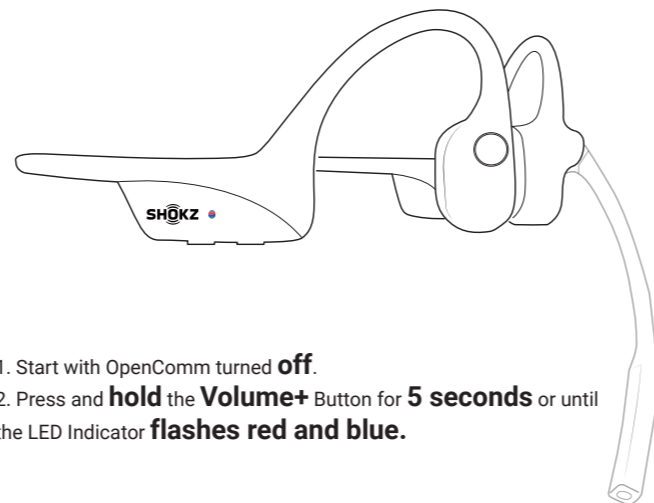


1. Start with OpenComm turned **off**.
2. Press and **hold** the **Volume+** Button for **5 seconds** or until the LED Indicator **flashes red and blue**.

## Pairing ②

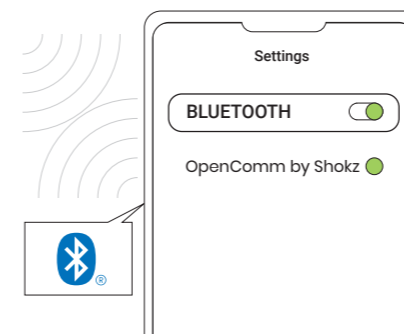

3. Open your device's **Bluetooth** settings and select "**OpenComm by Shokz**." Audrey will say "connected."

## Multifunction Button

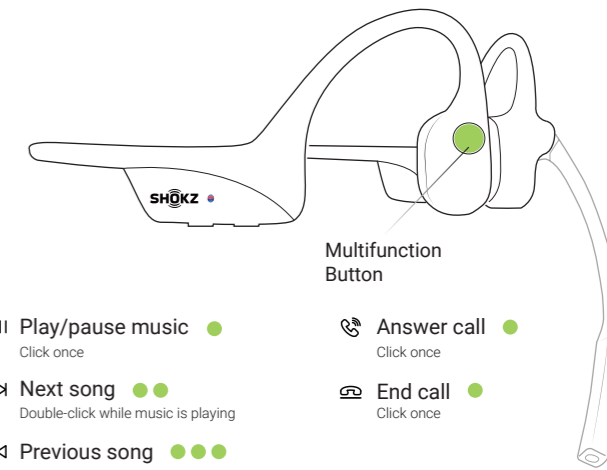

- ▶|| Play/pause music ●  
Click once
- ▶▶ Next song ●●  
Double-click while music is playing
- ◀◀ Previous song ●●●  
Triple-click while music is playing
- ☎ Answer call ●  
Click once
- ☎ End call ●  
Click once

